




 





 


 




 
 




m900 Setup Menu Guide

The m900 provides several setup and calibration options. The setup menu is accessed by the top panel volume encoder. To enter the setup menu, simply push and hold the volume encoder for 3 seconds. The 7 segment LED screen will change from the current level readout to the current submenu item.

From here you either turn the encoder to scroll through the setup menu, or push the encoder to adjust the current setup menu item. Rotate to select other menu items, or push and hold the encoder for 3 seconds to store your settings and exit the setup menu.

Menu Item	Actions
 CROSSFEED (x-feed) activates crossfeed on the outputs.	 Push encoder to activate / deactivate crossfeed. Decimal points on indicate that crossfeed is active. 
 Input Source Select Selects between the 3 available audio inputs - USB, S/PDIF or TOSLINK.	 Push encoder to select input source. 'U' is USB input, 'SP' is for S/PDIF, 'to' is for TOSLINK input.  
 DISPLAY DIMMER MODE Turns off 7 segment display after 5 seconds of inactivity. Turning or pushing encoder re-illuminates the display.	 Push encoder to activate.  Decimal points ON indicate that display dimmer mode is active.
 POWER UP LEVEL Enters current level setting as the default power up level. Set to 0 as factory default.	 Push encoder to activate.  Decimal points ON indicate that current level has been stored.
 DAC FILTER Changes the response of the digital filter.	 Push encoder to toggle between filter response modes.    <div style="display: flex; flex-direction: column; align-items: flex-end; margin-top: 10px;"> <p>F1 = sharp roll off, linear phase</p> <p>F2 = slow roll off, linear phase</p> <p>F3 = sharp roll off, minimum phase</p> <p>F4 = slow roll off, minimum phase</p> </div>
 SAMPLE RATE DISPLAY Displays the incoming audio stream sample rate.	 'FS' will show for 1/2 a second, then the incoming sample rate will be displayed.    <div style="display: flex; flex-direction: column; align-items: flex-end; margin-top: 10px;"> <p>Because the display is only 2 characters, the higher sample rates are abbreviated as: 17 (176) 19 (192) 35 (354) 38 (382). DSD rates are shown as d1 (DSD64), d2 (DSD128), and d4 (DSD256)</p> </div>